

# 420\*285MM 可印刷三折页样式

210x285mm





For 2016-2018 Chevy Silverado 1500

## Tools Required:

• 10mm socket • 15mm socket • 18mm socket • 7mm socket • Plastic remover tool

## (1)Contents:

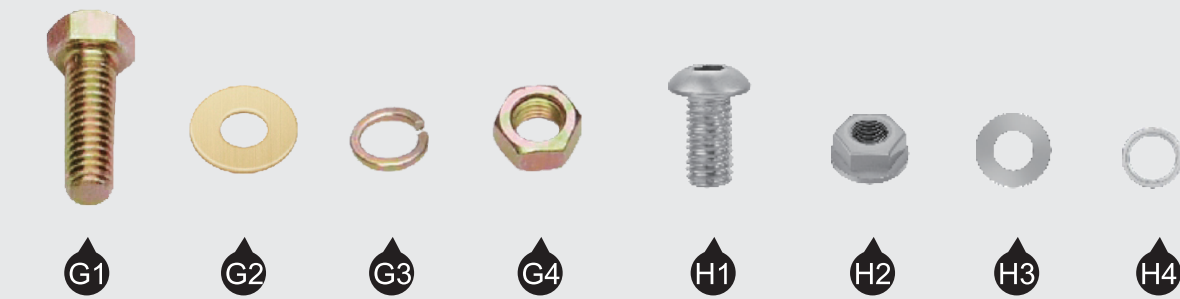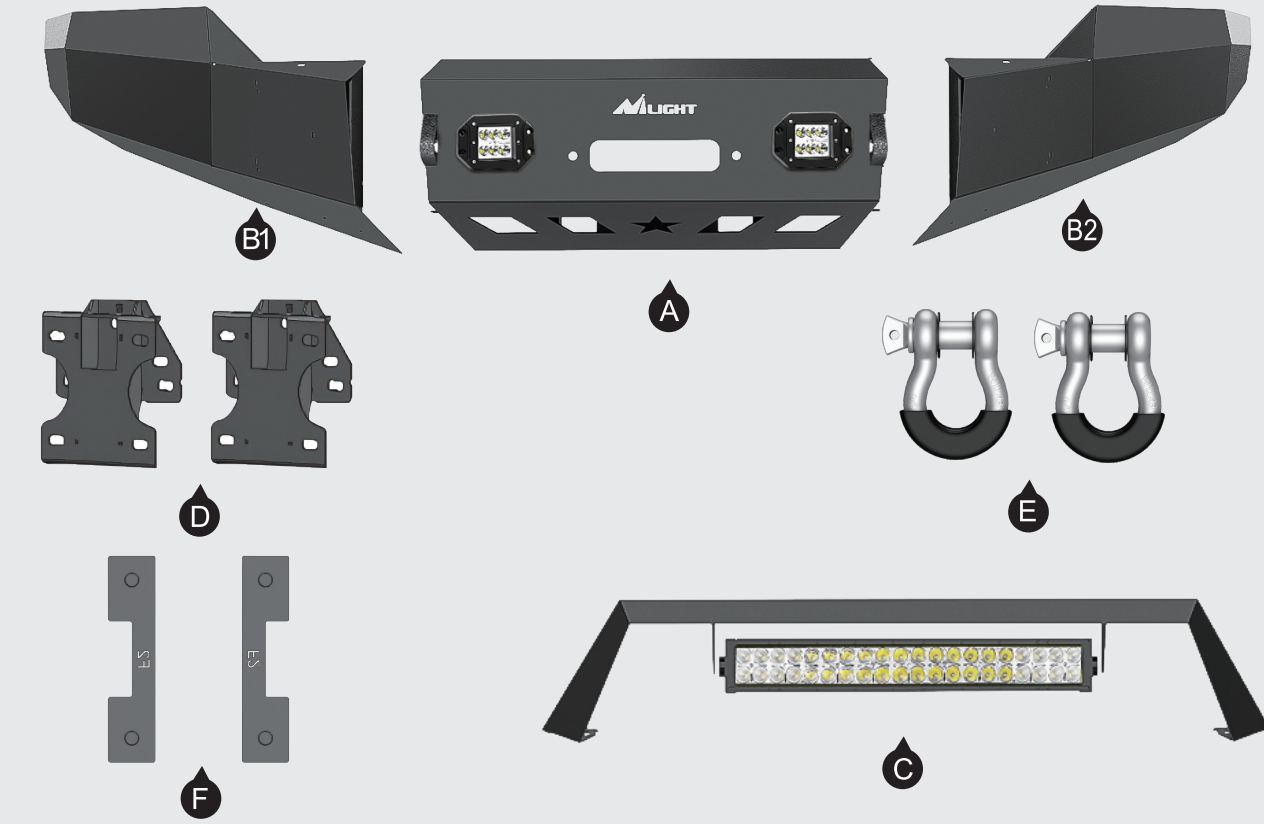

G1.M12\*40 hex head bolt×4 G2.M12 hex head nut×12 G3.M12 split washer×12 G4.M12 flat washer×16

H1.M8\*30 Allen hex bolt×12 H2.M8 flange nut×12 H3.M8 flat washer×24 H4.M8 split washer×12

210x285mm


## Notes

- The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.
- Read this instruction carefully before starting installation.
- Proper tools will improve the quality of installation and reduce the time required.
- Please contact us if missing parts or any damage found.
- Installation takes approximately one hour, 2-3 people may be needed.


## Installation Instruction:

### 1 Assemble the Bumper.

(1) Connect the part B1, B2 and A with 8 of H1 & H2 & H4, and 16 of H3.

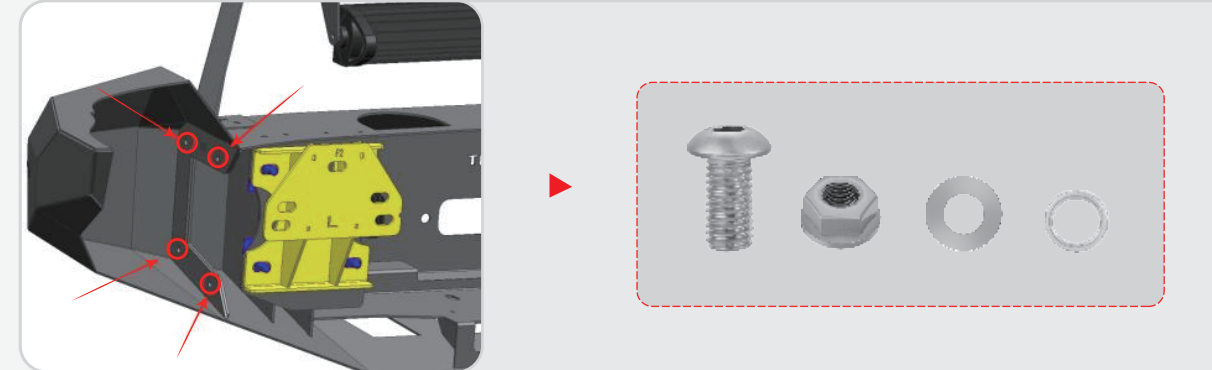

(2) Install the part C with 4 of H1 & H2 & H4, and 8 of H3

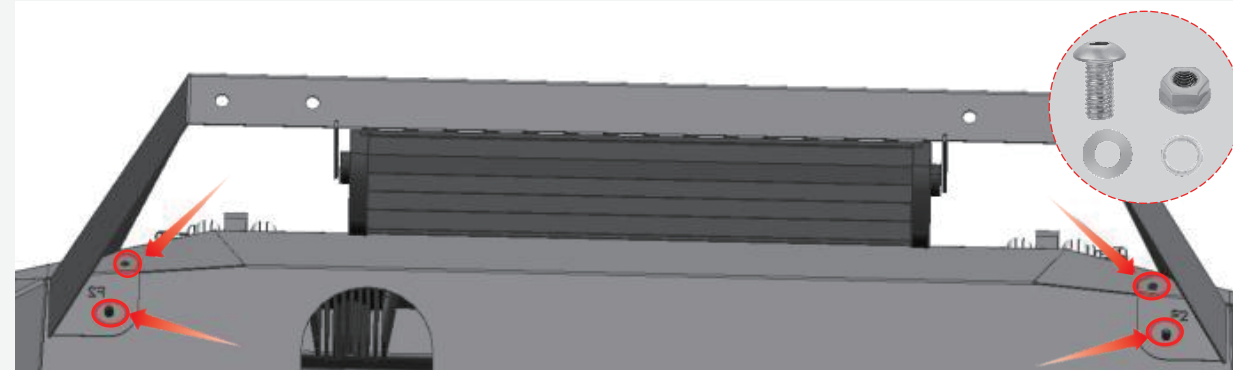


(3) Install the part E




210x285mm

### 2 Factory Bumper Removal

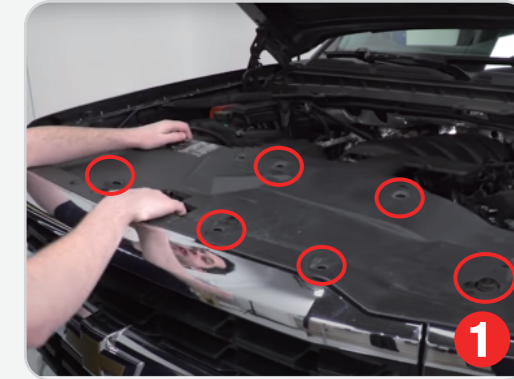

(1) Using a plastic removal tool locate and remove 12 factory clips holding the radiator shroud onto vehicle. Remove plastic radiator shroud from vehicle. Set shroud and hardware aside for re-installation.

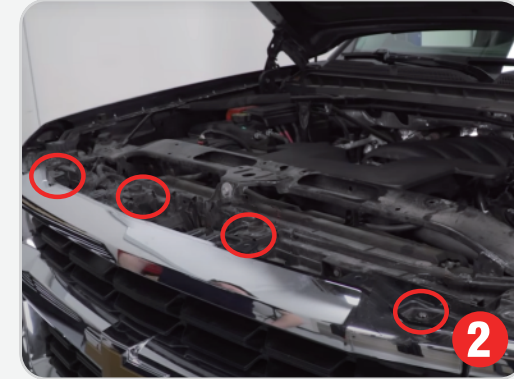

(2) Using a 10mm socket locate and remove 4 factory bolts securing factory grille onto vehicle. Set hardware aside for re-installation. And then firmly grab and pull factory grille off of vehicle. Place factory grille aside for later use.




(3) Working underneath the vehicle. Using a 15mm socket locate and remove the two bolts mounted onto the side of the bumper as shown. Using a 18mm socket locate and remove four factory bolts holding the bumper onto vehicle.



(4) With help from an assistant remove factory bumper from vehicle. Set factory bumper aside in a protected area.

210x285mm

### 3 Remove Both Bumper Brackets and Tow Hooks

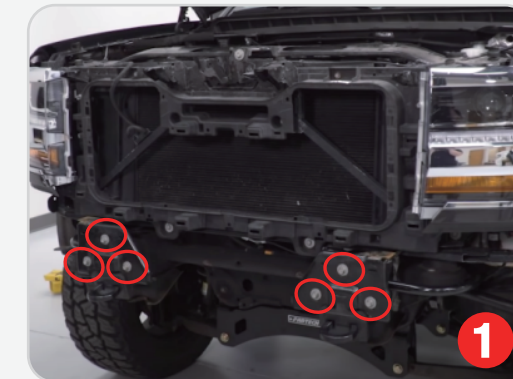

(1) Using a 15mm socket locate and remove 3 factory bolts holding the factory mounting bracket onto vehicle. Remove factory mounting bracket. Set hardware aside for re-installation. Repeat step other side mounting bracket.



(2) Using a 18mm socket locate and remove two bolts holding the factory tow hook onto vehicle. Discard factory tow hook and factory hardware. Repeat step for other tow hook.


### 4 Installing Mounting Bracket

(1) Locate and place supplied mounting bracket (D) onto vehicle. Line up the holes in the mounting bracket with the holes in the vehicle frame. Reinstall all three factory bolts previously removed in step (1)&(2) in the removal process (Step 3). Tighten down all bolts using 15mm socket.




(2) Place a supplied M12\*40 hex head bolt (G1) with a M12 flat washer (G4) through the hole in the vehicle frame. Place a supplied M12 flat washer and a M12 split washer (G3) on the end of bolt. Start a M12 hex head nut (G2) at the end of bolt. Tighten down using a 18mm socket. Repeat step for remaining bolt.

210x285mm

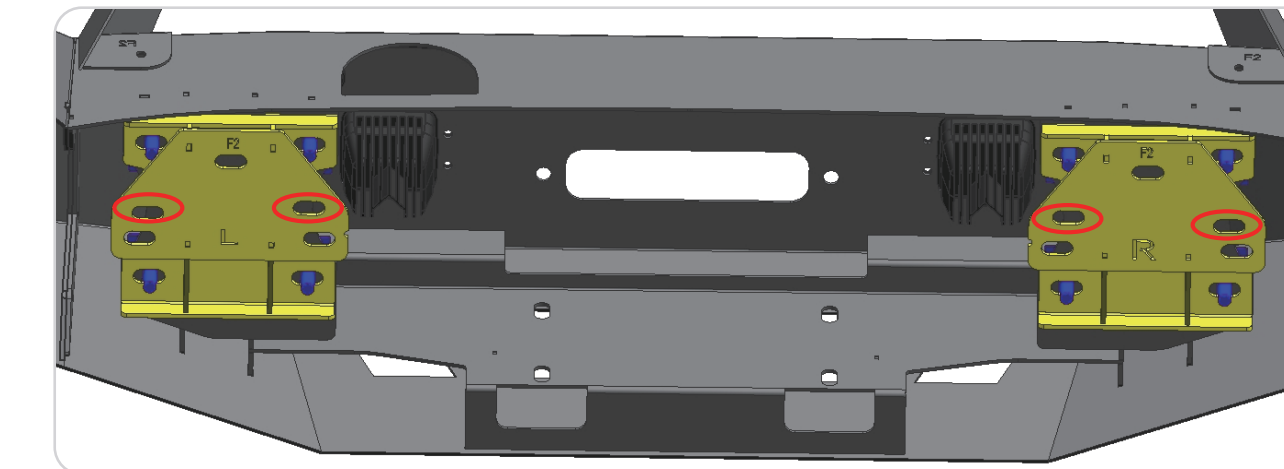


### 5 Installing the New Bumper

(1) Line up the bumper the holes with the holes in the mounting bracket. Working underneath the vehicle. Place supplied U bracket (F) from behind the bumper hole and through the hole in the mounting bracket. Repeat same steps for other side.

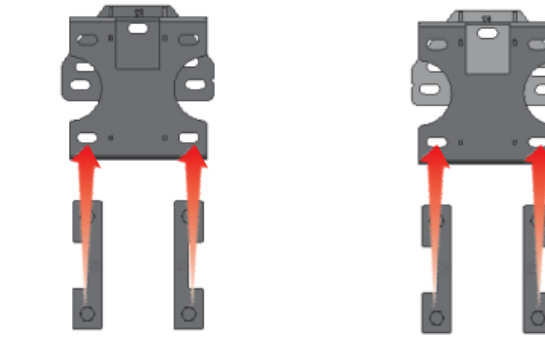

(2) Place a supplied M12 flat washer (G4) and a M12 split washer (G3) onto bolt. Start a M12\*40 hex head bolt (G2) at the end of bolt. Tighten down using a 18mm socket. Repeat step for remaining bolts.

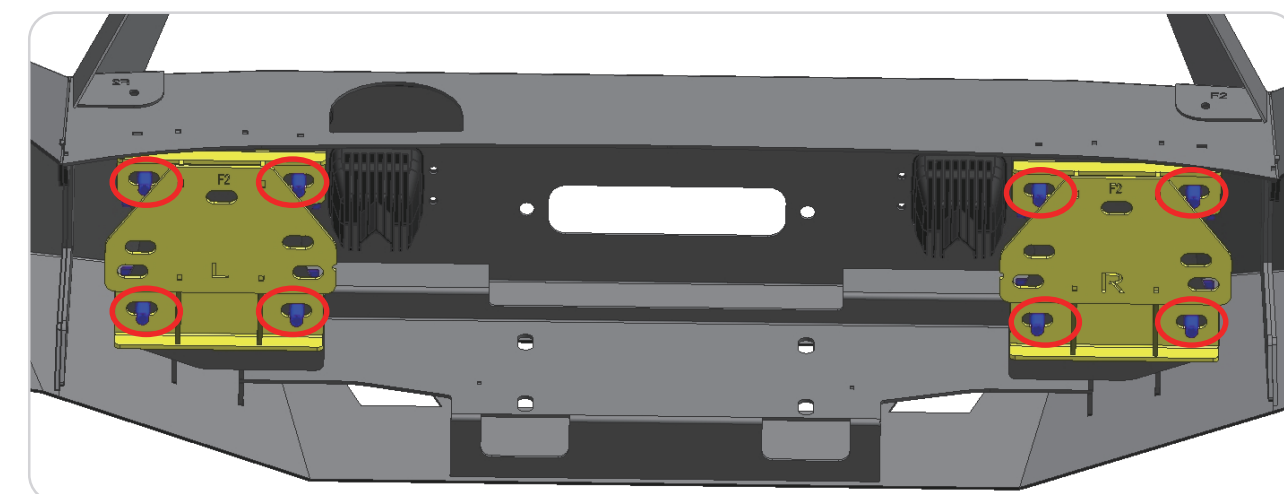

(3) Reinstall factory grill back onto vehicle by reversing steps (1)-(3) in the removal process (Step 2).

(4) Proceed to make electrical connections for the LED lights. If you are not qualified to make the proper connections, we highly recommend that you contact an installation expert to complete the connections.

210x285mm

Enjoy Your New Nlight Bumper!

