

420*285MM



210x285mm




Pickup Truck Front Bumper

For 2013-2018 Dodge Ram

(1)Contents:

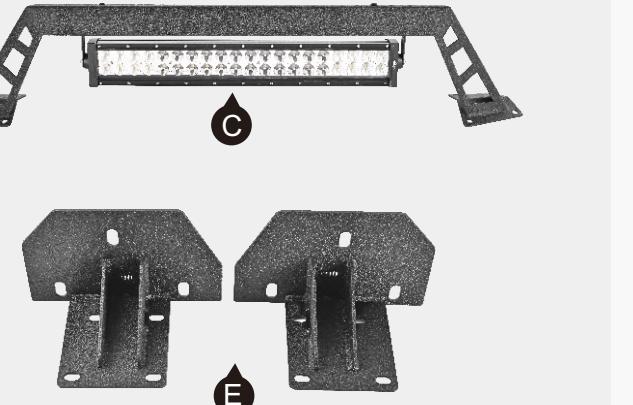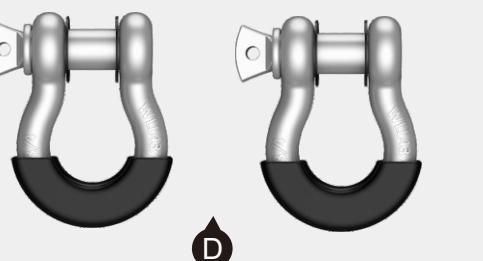

X6

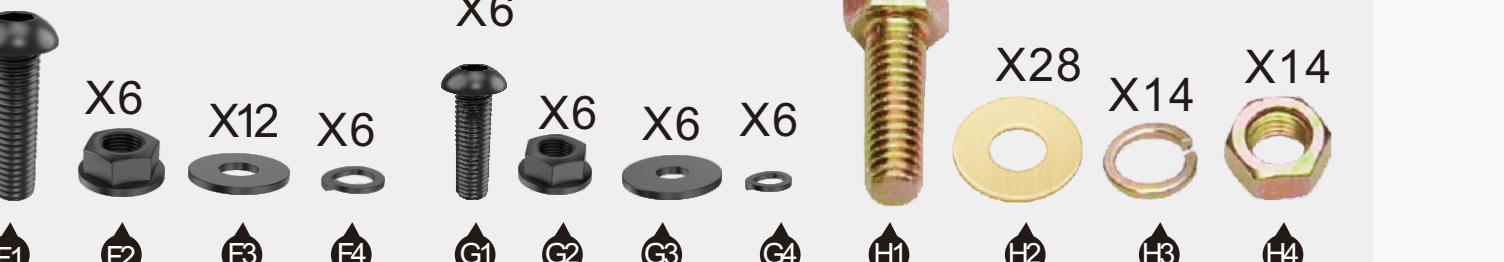

Notes

- Read this instruction carefully before starting installation.
- Proper tools will improve the quality of installation and reduce the time required.
- Please contact us if missing parts or any damage found.


(2)Installation time: About 1 hour, 2-3 people may be needed.

Installation Instruction


1

Step1 Assemble the bumper.


(1)Connect the PART B1, B2 and A, with 6 of F1, F2&F4, and 12 of F3.

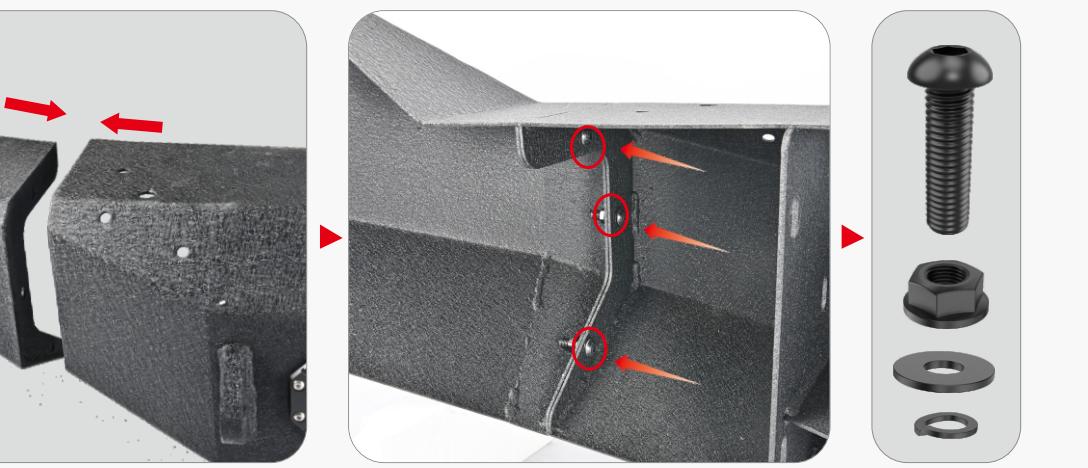

(2)Install the PART C, with 6 of G1, G2, G3&G4.

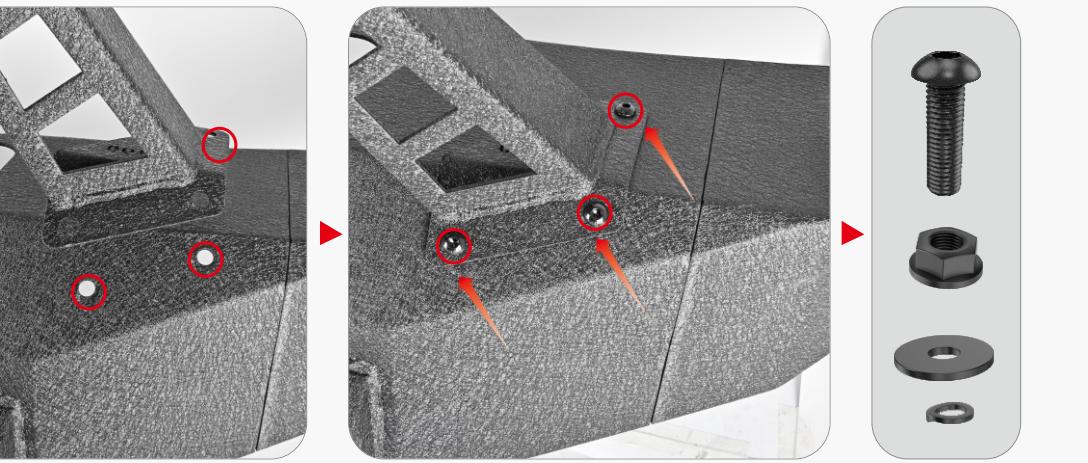

(3)Install the PART D

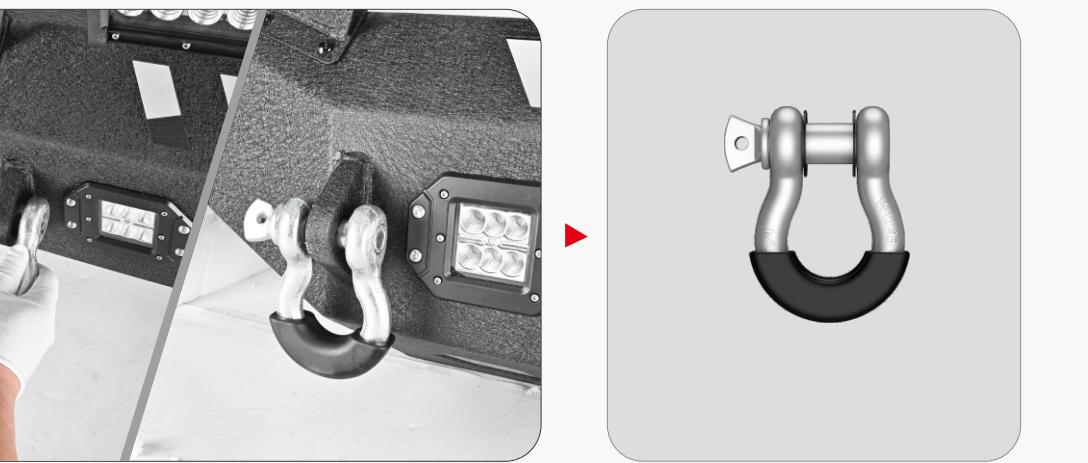


2

Step2 Remove the factory OEM bumper.

210x285mm

210x285mm

210x285mm

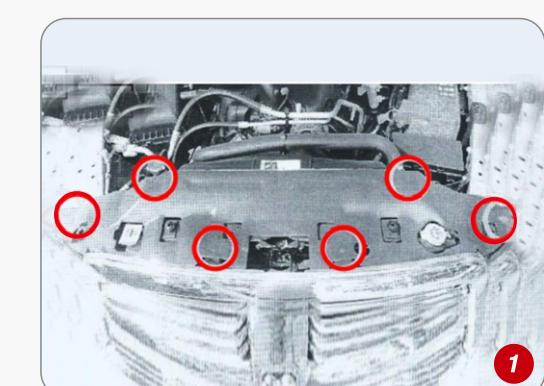

(1)Open vehicles hood. Using a plastic clip removal tool or similar tool locate and remove 6 factory plastic push clips securing the plastic radiator shroud to the vehicle. Remove plastic radiator shroud from vehicle.




(3)Firmly grab and pull factory grille off vehicle. Set factory grille aside for later use.



(5)Pull back inner fender and upper trim piece to allow access behind the inner fender to remove one factory bolt, securing the headlight trim piece onto vehicle. Using a 10mm socket remove bolt. Set aside for later use. Repeat step 4-5 for other side.



(7)Working underneath the vehicle. Using a 15mm socket locate and remove 3 factory bolts holding the bumper onto vehicle. Set hardware aside for later use. Repeat step for other side.

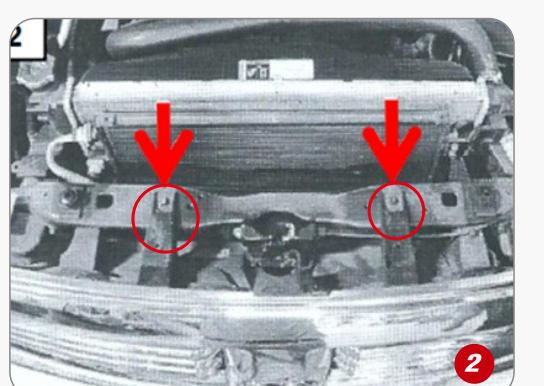


(2)Using a 10mm socket locate and remove 4 factory hex head bolts securing the grille onto the vehicle. Set hardware aside for later use.



(4)Proceed to the inside of the vehicle wheel well. Using a 7mm socket locate and remove one factory hex head bolt holding the body colored top cap onto vehicle. Set hardware aside for reinstallation. Repeat step for other side




(6)Remove body colored top cap by firmly pulling on one side of the vehicle working your way to the other side. Be careful not to damage body colored top cap. Set body colored cap and hardware aside for reinstallation.

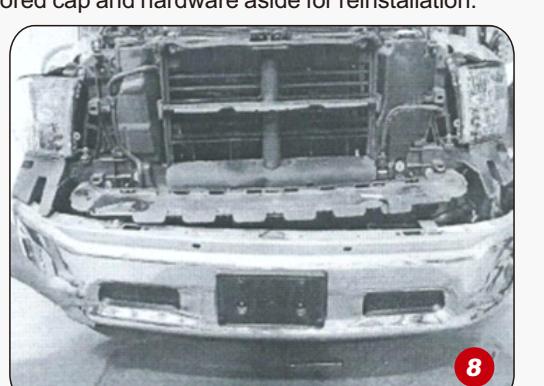


(8)With help from an assistant remove factory bumper from vehicle. Discard factory bumper.




(9)Using a 10mm socket locate and remove 3 factory bolts holding the center plastic onto vehicle. Discard plastic center. Repeat step for other side.

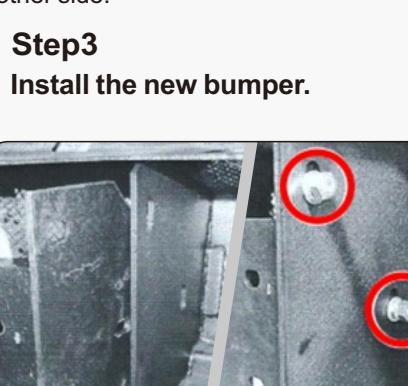

(10)Using a 10mm socket locate and remove 4 factory bolts holding the center plastic onto vehicle. Discard center plastic.

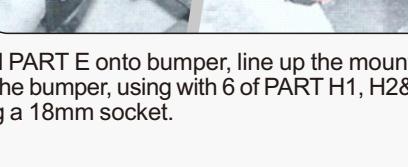

(1)Install PART E onto bumper, line up the mounting bracket holes with the holes in the bumper, using 6 of PART H1, H2&H4, 12 of H3, tighten down bolt using a 18mm socket.

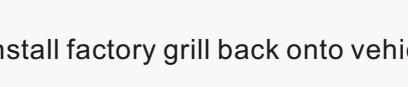

(3)Reinstall factory grill back onto vehicle by reversing steps 1-3 in the removal process.

(4)Proceed to make electrical connections for the LED lights. If you are not qualified to make the proper connections, we highly recommend that you contact an installation expert to complete the connections.

(5)Congratulations, your installation has been completed.

Enjoy Your New Nilight Bumper!

