

148X210mm

148X210mm

148X210mm


148X210mm



Slip-Proof Running Boards

For 2015-2024 Ford F-150 SuperCrew Cab 4 Full Size Doors

Part List

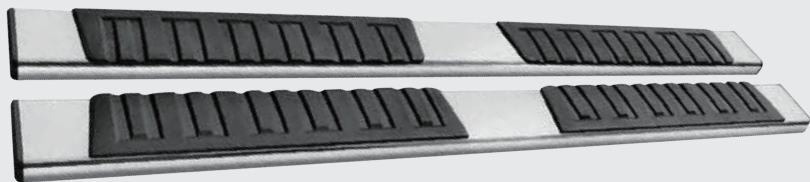

A

X6



B

X18



C

X18



D

X18



E

X12



F

X12



G

X12

A.X6 Mounting Bracket

B.X18 M8 Hexagon Flange Nut

C.X18 M8 Lock Washer

D.X18 M8 Flat Washer

E.X12 M8 Hexagon Flange Bolt

F.X12 M8 Lock Washer

G.X12 M8 Flat Washer

Notes


- Read this instruction carefully before starting installation
- Verify the direction of brackets before starting installation
- Proper tools will improve the quality of installation and reduce the time required
- If missing parts or any damage found, please take a picture, and contact us

Installation Instruction

1

Step1

- (1) Locate three mounting positions each side.
- (2) Remove rubber plugs on inner rocket panel.

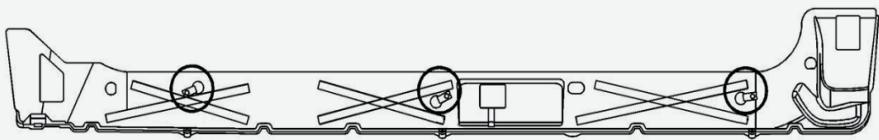


Front

Passenger Right Side

2

Step2


- (1) Attach bracket to the rocker panel, feed factory studs through the holes on bracket.
- (2) Secure with (3) M8 flat washers, (3) M8 lock washers, (3) M8 hex flange nuts.
- (3) Repeat to install all brackets. Do not fully tighten.

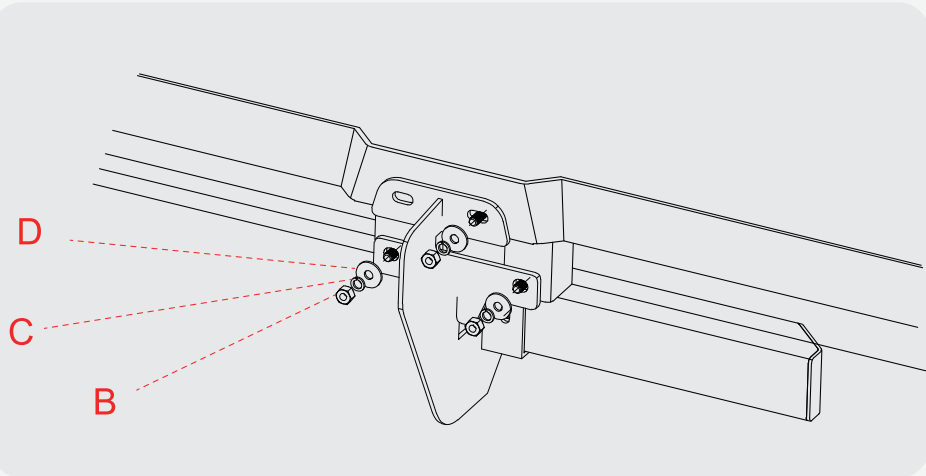

3

Step3

- (1) Remove (6) M8 hex bolts, (6) M8 lock washers and (6) M8 flat washers from the back of step bar.
  - (2) Slide mounting tracks to proper positions.
  - (3) With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets with (6) M8 hex bolts, (6) M8 lock washers and (6) M8 flat washers from the back of step bar.
- Repeat to install the other side step bar. Do not fully tighten.

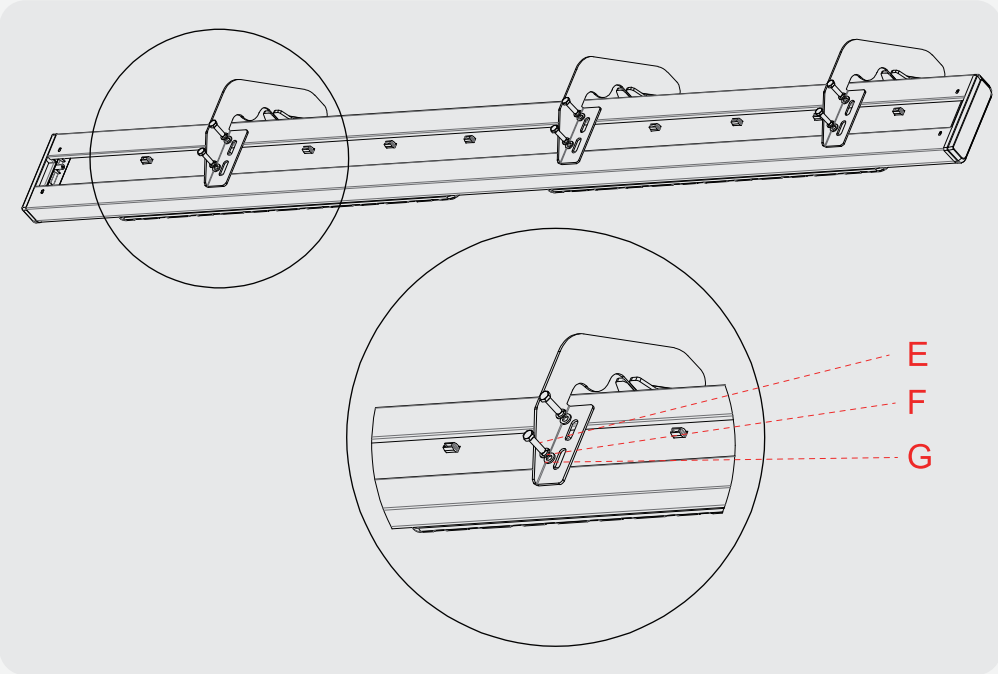

4

Step3

- (1) Tighten M8 hex nuts on vehicle with 15 ft-lbs. torque.
- (2) Adjust the step bar to level and tighten M8 hex bolts with 15 ft-lbs. torque.

Notes:

Periodic check to ensure all mounting hardware remains secure and tight

Enjoy Your New Nlight Running Boards!



正面

背面