

420*285mm





Pickup Truck Front Bumper

For 2021-2023 Ford Bronco

Tools Required

- M6 Allen Wrench
- M8 Allen Wrench
- Torque Wrench

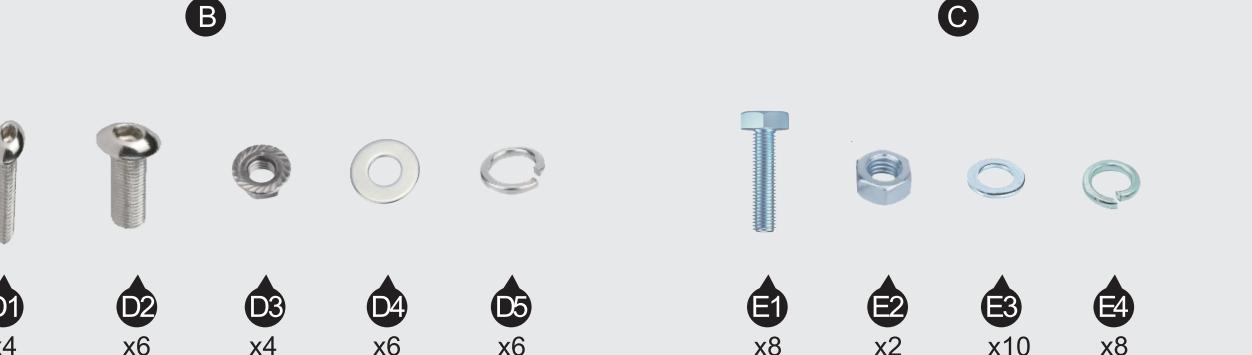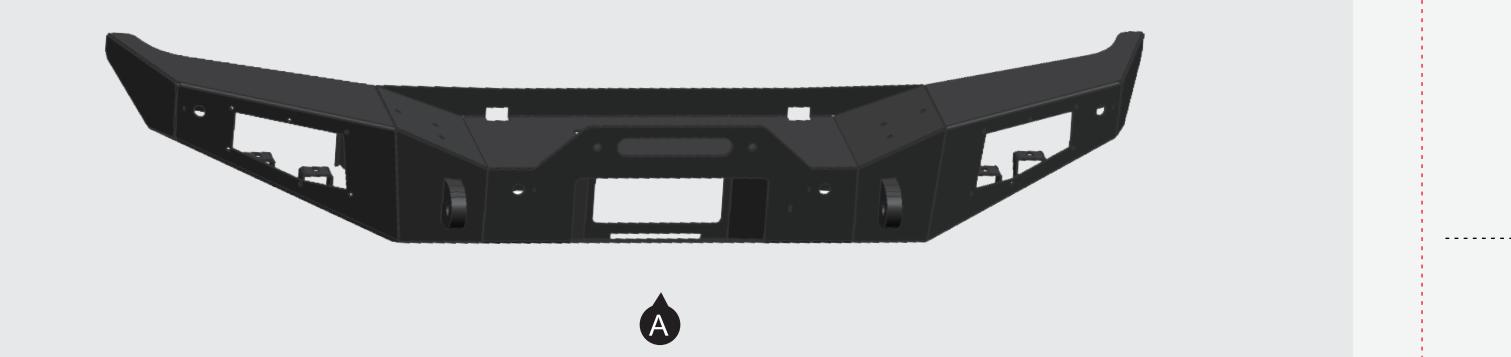

D1: M6x30 allen hex bolt X4
D2: M8x20 allen hex bolt X6
D3: M6 flange nut x4
D4: M8 flat washer x6
D5: M8 spring washer X6


E1: M12*35 hex bolt X8
E2: M12 hex nut X2
E3: M12 flat washer X10
E4: M12 spring washer X8

Notes
• Read this instruction carefully before starting installation.
• Proper tools will improve the quality of installation and reduce the time required.
• If missing parts or any damage found, please take a picture, and contact us.

Installation Instruction


1 Step1

(1) Install the "PART C" into the "PART A" and tighten up it with 6 of "PART D2", 6 of "PART D4", 6 of "PART D5".
(2) Tighten with M8 Allen Wrench.

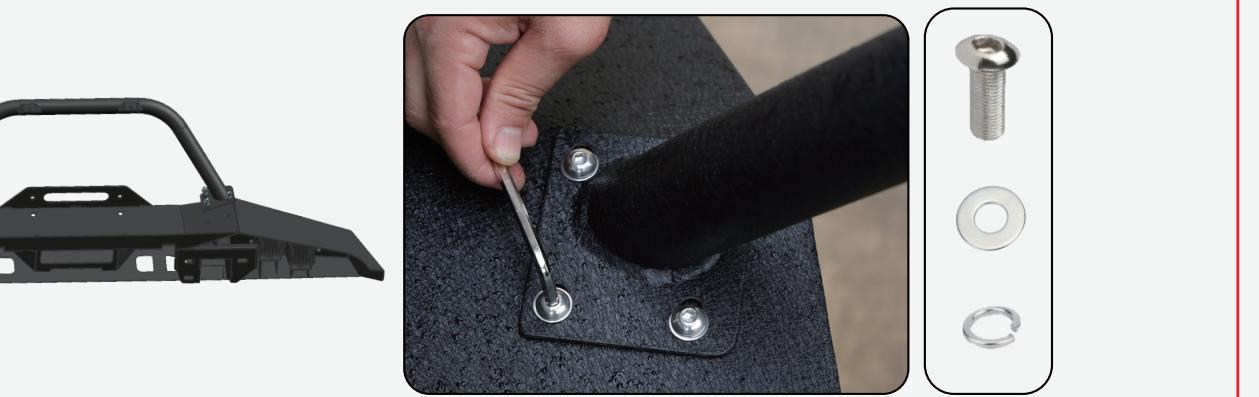


2 Step2

(1) Mount the radar with "PART D1" and "PART D3" and screw directly.
(2) Install the "PART B" into the "PART A" and tighten up it with 2 of "PART E1", 2 of "PART E2", 4 of "PART E3", 2 of "PART E4".
(3) All accessories installed.

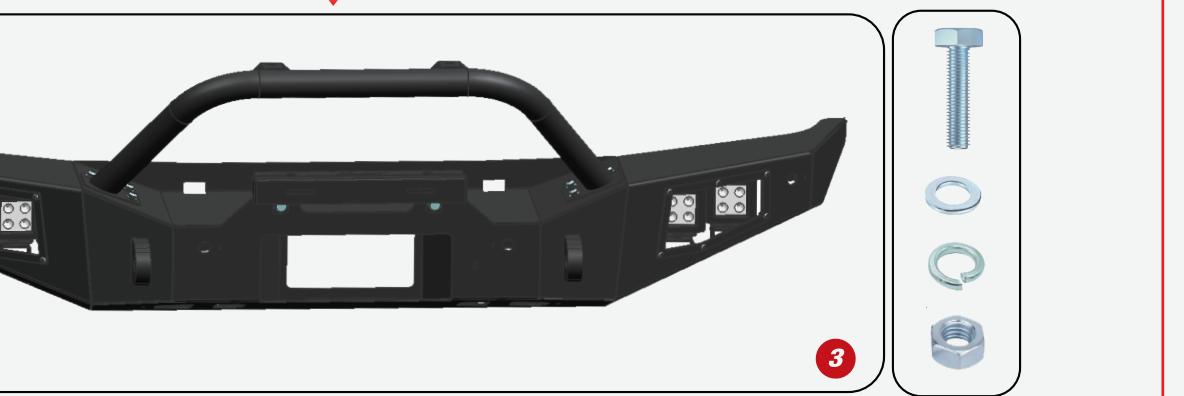

3 Step3

Align the six spaces on the car, Install the "PART A" into the car frame and tighten up it with 6 of "PART E1", 6 of "PART E3", 6 of "PART E4".

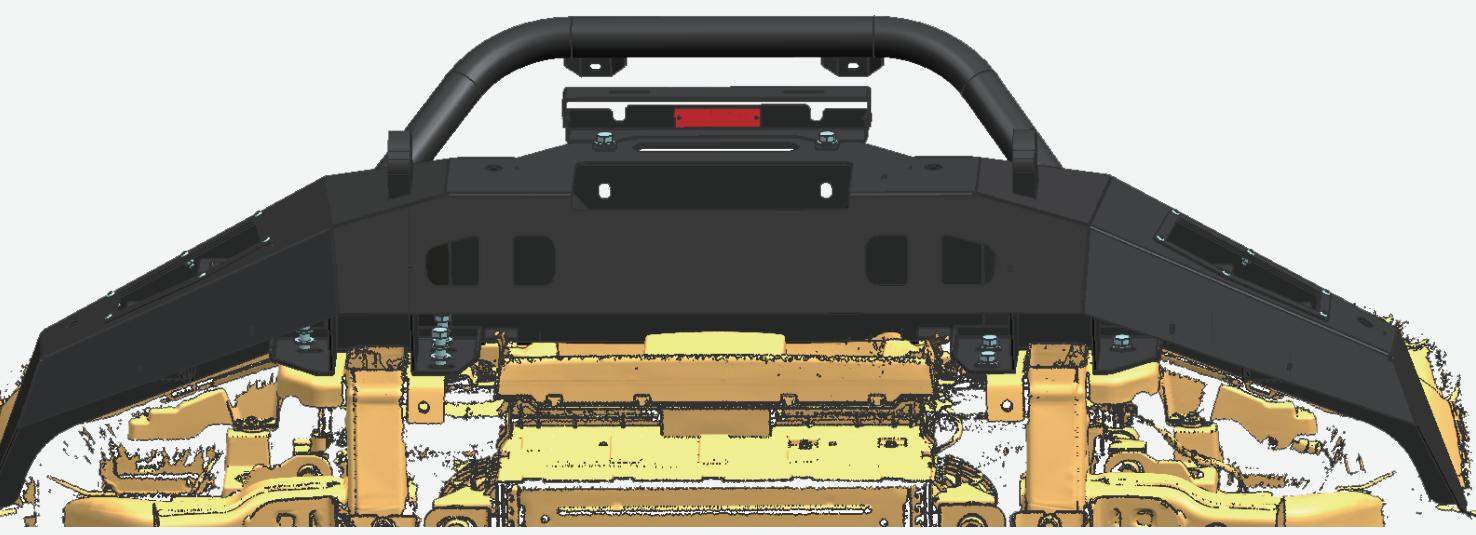

Enjoy Your New Nilight Bumper!

