

420*285mm



Pickup Truck Rear Bumper

For 2021-2023 Ford Bronco

Tools Required

- M6 Allen Wrench
- Torque Wrench



E1: M6x16 allen hex bolt X2
E2: M6x30 allen hex bolt X4
E3: M6 flat washer x4
E4: M6 hex nut X2
E5: M6 flange nut X4



F1: M10x25 hex bolt X1
F2: M10 flange nut x1
F3: M12x100 hex bolt X4
F4: M12 spring washer X4
F5: M12 flat washer X8
F6: M12 hex nut X4

Notes

- Read this instruction carefully before starting installation.
- Proper tools will improve the quality of installation and reduce the time required.
- If missing parts or any damage found, please take a picture, and contact us.

Installation Instruction

1

Step1
(1) Install the "PART B" into the "PART A" and tighten up it with 2 of "PART E1", 4 of "PART E3", 2 of "PART E4".
(2) Tighten all with M6 Allen Wrench.




2

Step2
(1) Mount the radar with "PART E2" and "PART E5" and screw directly.
(2) Use the screws of "PART F1" and "PART F2" to install directly and tighten.
(3) All accessories installed.




3

Step3
(1) Align the 4 holes on the car and install with the original car screws.
(2) Install the "PART C" into the car frame and tighten up it with 4 of "PART F3", 4 of "PART F4", 8 of "PART F5", 4 of "PART F6".

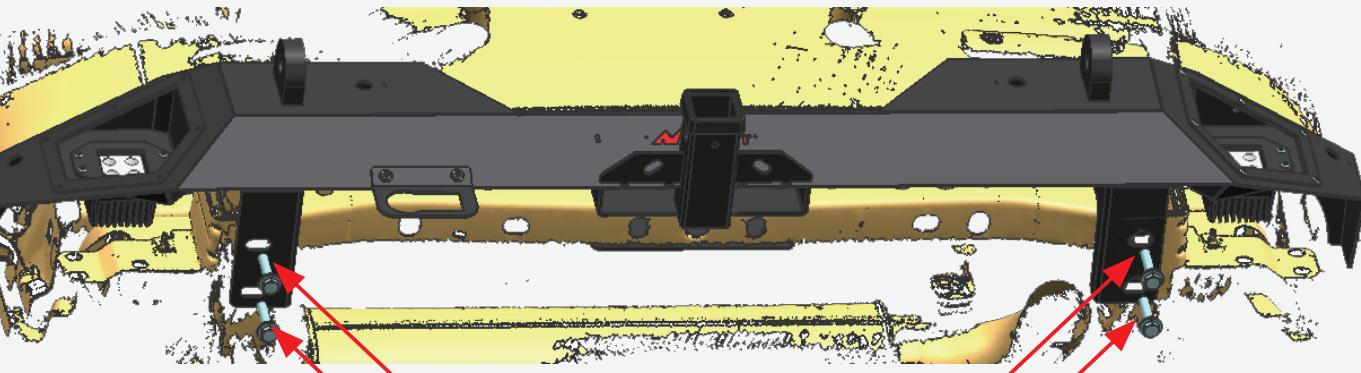

Use the original car screws here.

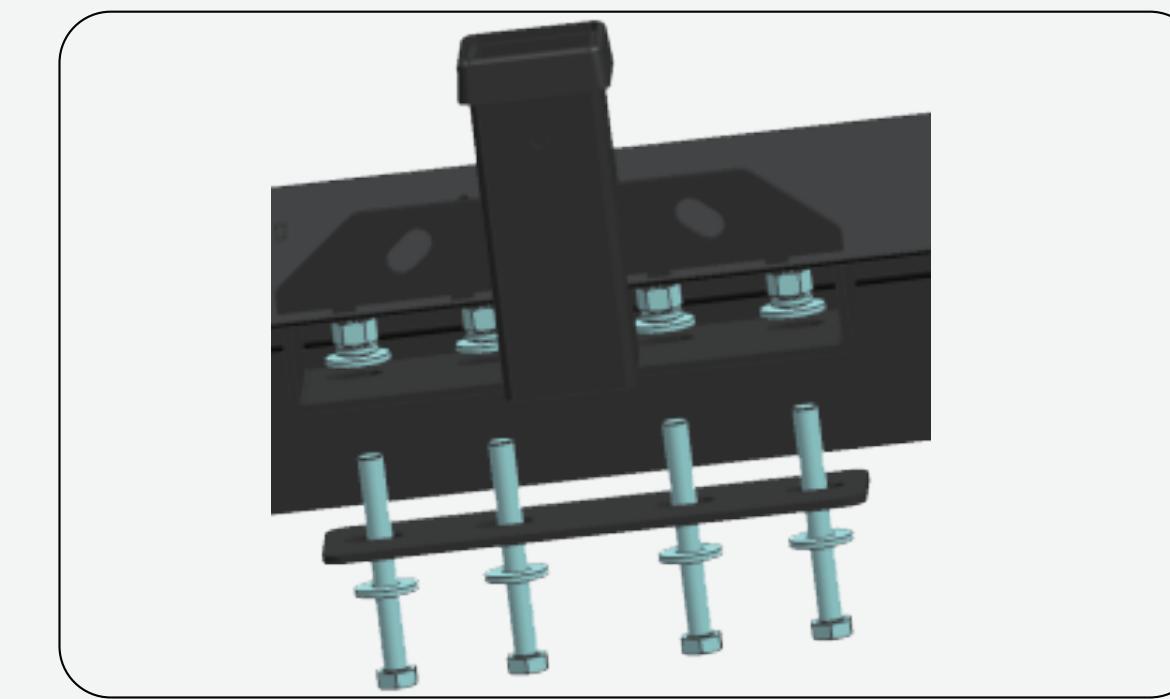

Enjoy Your New NilightBumper!

