


MILIGHT Installation Instructions


- 1** You are ready to install the Nilight Rear Bumper using the following parts:

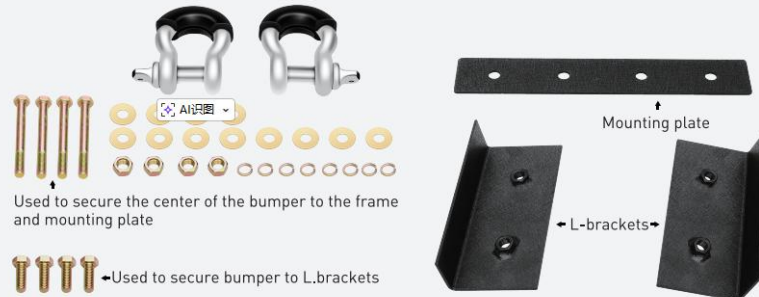


- 2** Slide the L-brackets into the frame and align the mounting holes.



- 3** Now it's time to bolt the bumper up into place. Ideally, a second person would help hold the bumper into place. Slide the bumper into place, align the holes, and secure it to the frame using the (4) short 18mm bolts and corresponding washers provided. Do not fully tighten until the entire assembly is complete.

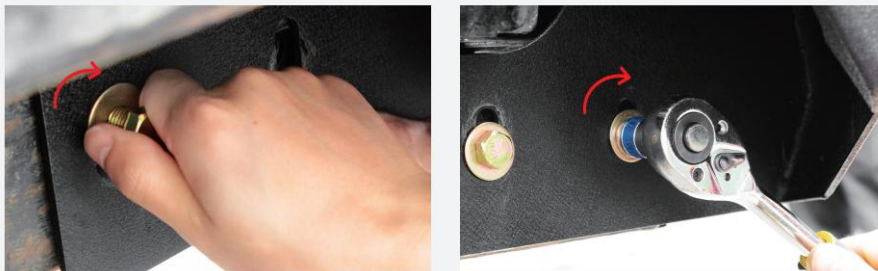

- 4** Next, install the metal mounting plate on the back side of the frame using the (4) long 18mm bolts and the corresponding washers.

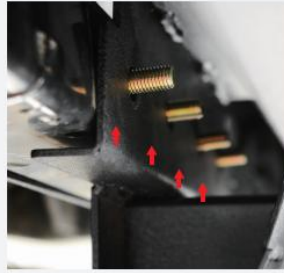

- 5** Insert the (2) D-Rings if desired.



- 6** Tighten all of the bolts and the installation of your Nilight Rear Bumper is complete.



“

Remove the six mounting bolts from the stock bumper using a 16mm socket. Pull up and out to remove the stock bumper. (Plenty of YouTube videos in case you can't figure it out.)

”



Enjoy Your new Nilight Bumper!