

# MILIGHT Installation Instructions

**1** Remove rear bumper end caps using T30 Torx bit. There are 5 bolts on each side, 2 on the top side and 3 on the bottom side. Remove the 2 topside bolts on each side first.



AI识图 ▾


**2** Remove the 3 bolts on each side of the bottom side of the bumper.



**3** Remove 18mm bottom side bolt on the driver and passenger side of the bumper.



**2** Remove the 3 bolts on each side of the bottom side of the bumper.

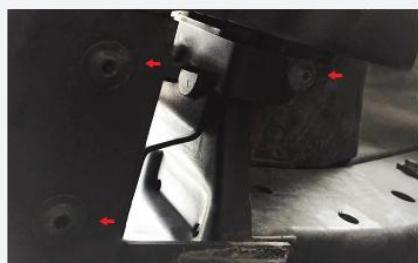

**3** Remove 18mm bottom side bolt on the driver and passenger side of the bumper.



**4** Remove the 2 back side 18mm bolts on drive and passenger side of the bumper.



**5** Included Components.



AI识图 ▾

6

You are ready to install the Nilight Front Bumper using the following parts:




AI识图 ▾



AI识图 ▾

7

Install the (6) 19mm hex bolts into place, leaving them loose for adjustment. Make sure the bumper is centered and then tighten all of the bolts.

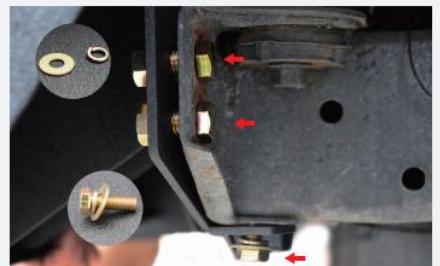

AI识图 ▾

8

Attach the included D-rings by unscrewing the clevis pin and fastening to the D-Ring mount on each side of the bumper.



## Nilight Heavy Duty Rear Bumper (87-06 Jeep Wrangler TJ/YJ)

### Tools Required:

18mm socket and wrench / T30 Torx



***Enjoy Your new Nilight Bumper!***

