




Installation Instructions

1

From under the vehicle, remove the (8) plastic push pins securing the factory splash shield to the vehicle. Next remove the (2) 8mm screws, and remove the splash shield from the vehicle.

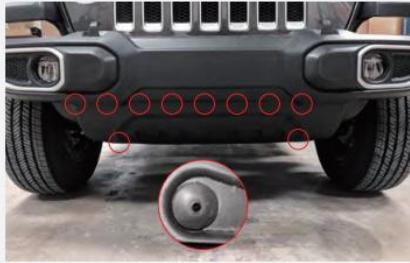

2

Remove the (2) upper plastic push pins securing the plastic cover to the frame rails.



3

Now with the plastic pieces removed, disconnect the factory fog light connections from the fog light housing

4

There will be 8 18mm nuts that attach the bumper to the frame, use 18mm socket and remove these 8 nuts. There are four on each side of the frame. After removing the 8 nuts, slide the factory bumper off.



5

You are ready to install the Nilight Front Bumper using the following parts:




6

Install the winch plate using the previously removed factory screws.



7

Install the front bumper with led lights,hoop, and Flip-Up License Plate Holder

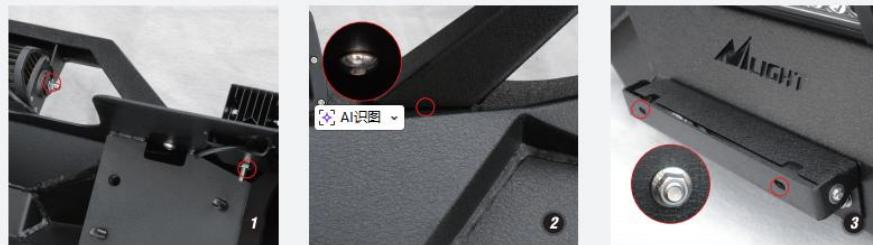

8

The Nilight front bumper has 3 bolts in each side. Those three bolts will slide directly into the same mounting holes the original bumper was removed from. The 4th hole in each side will receive a bolt that came in the parts bag supplied with the bumper.



9

Each of the 3 pre-installed bolts will attach with a flat washer, lock washer and nut. All 8 bolts connections will be tightened as shown partially completed in the following pictures.



Nilight Front Bumper with LED Light bar 2018+ JL

Tools Required:

Plastic Pry Tool or Panel Clip Pliers / 7 mm socket or wrench / 8 mm socket or wrench
10 mm socket or wrench / 12 mm socket or wrench / 18 mm socket or wrench



Enjoy Your new Nilight Bumper!

