

420*285MM

可印刷三折页样式

210x285mm





Off Road Rear Bumper

For 1984-2001 Jeep Cherokee XJ

Tools Required:

- 18mm socket
- 16mm socket
- 10mm socket
- 7mm socket
- T-20 torx bit
- Ratchet
- Plastic Removal Tool

(1)Contents:

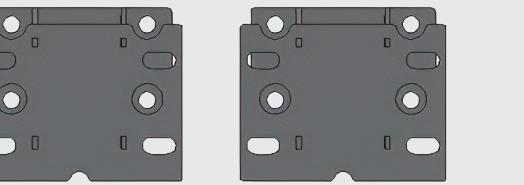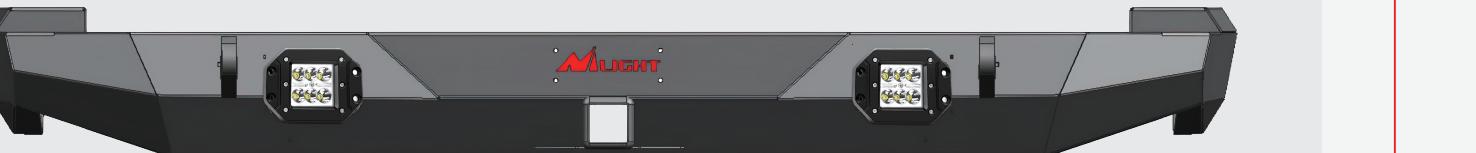

A



B



C



D1.M12*30 hex head bolt×8 D2.M12*30 flat washer×16 D3.M12 hex head nut×8 D4.M12 split washer×8

E1.M10*25 hex head bolt×8 E2.M10*25 flat washer×8 E3.M10 split washer×8


• The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

- Read this instruction carefully before starting installation.
- Proper tools will improve the quality of installation and reduce the time required.
- Please contact us if missing parts or any damage found.
- Installation takes approximately one hour, 2-3 people may be needed.

Installation Instruction:

1 Factory Bumper Removal

(1) Locate and remove three factory bolts holding the factory bumper cap onto vehicle. Firmly grab bumper end cap and pull back to remove. Discard bumper cap and hardware. Repeat step for other side bumper cap.

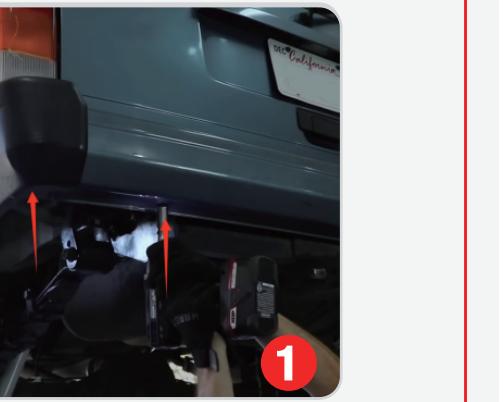

(2) Locate and remove 8 factory bolts holding the bumper onto vehicle. With help from assistant remove factory bumper from vehicle.




2 Installing the New Bumper

(1) Placed a supplied mounting bracket (B) onto vehicle line up the holes in the mounting bracket with the holes on the vehicle. Place a M10*25 hex head bolt (E1) with M10 split washer (E3) and M10*25 flat washer (E2) through the holes in the mounting bracket and onto the holes on the vehicle. Tighten down using socket.



(2) With help from an assistant place bumper onto vehicle. Place a supplied M12*30 hex head bolt (D1) with M12*30 flat washer (D2) through the hole in the bumper and through the holes in the mounting bracket (B). Place a M12*30 flat washer and M12 split washer (D4) at the end of bolt. Start a M12 hex head nut (D3) at the end of bolt. Tighten down using a socket. Repeat step for remaining bolt.

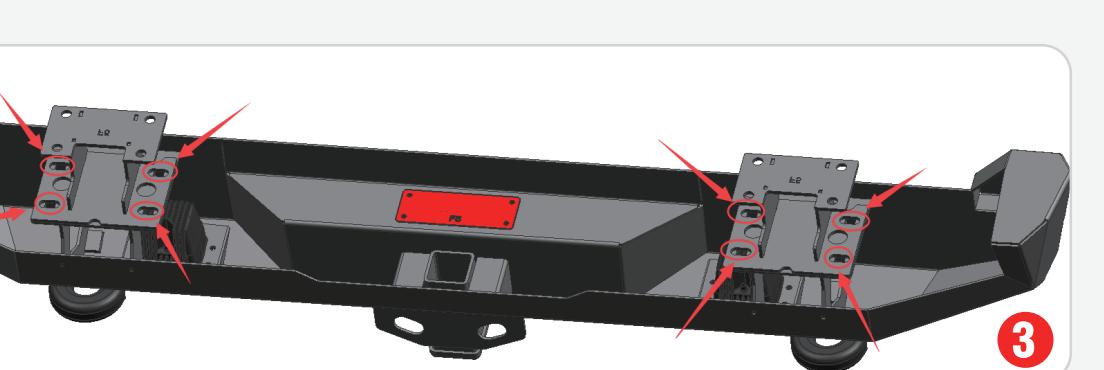

(3)Install the part "E"on the bumper.



Enjoy Your New Nilight Bumper!



210x285mm

210x285mm